

TROUBLESHOOTING GUIDE

Starter Motor Not Rotating

- Engine stop switch "OFF"
- Fuse failed
- Battery leads do not make good electrical contact with battery terminals
- Battery discharged

Engine Cranks, But Won't Start

- No fuel in tank
- Fuel filter clogged
- Fuel tap turned off
- Water in fuel
- Air filter clogged or inlet blocked
- Engine flooded
- Fuel tank vent clogged or hose kinked
- Spark plug wire not on spark plug
- Valve clearance incorrect
- Spark plug dirty

Engine Stops

- No fuel in tank
- Water in fuel
- Fuel filter clogged
- Fuel tap turned off
- Choke left on too long
- Air filter clogged or inlet blocked
- Fuel tank vent clogged

● Engine overheated

- Too much idling or low speed running (not enough air flow)
- Overloaded
- Wrong spark plug
- Coolant level too low
- Coolant deteriorated
- Engine oil low

No Power

● Engine overheated

- Too much idling or low speed running (not enough air flow)
- Overloaded
- Wrong spark plug
- Coolant level too low
- Coolant deteriorated
- Engine oil low

● Compression leakage

- Valve clearance insufficient

● Fuel filter clogged

● Air filter clogged or inlet blocked

● Spark plug dirty or worn

● Choke left on

● Engine oil incorrect

● Water in fuel

● Drive belt slipping

- Water in belt drive torque converter housing